Digital Camera

FINEPIX S100FS

Quickstart

FUJIFILM digital

Camera Controls

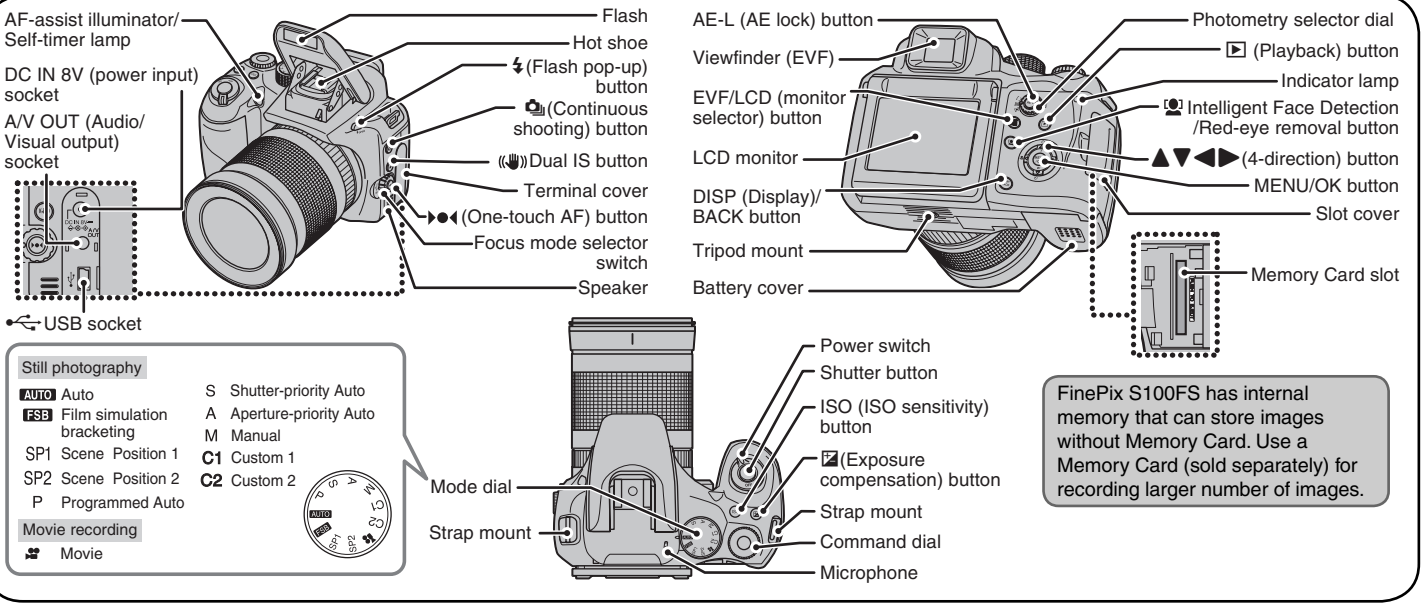

FinePix S100FS has internal memory that can store images without Memory Card. Use a Memory Card (sold separately) for recording larger number of images.

BL00673-200(1) E

Picture Taking

Refer to Owner's Manual for more detailed instructions

A. Charging the Battery

1.

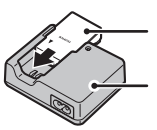

Load the battery into the battery charger BC-140. Set the battery correctly as indicated by the polarity icon.

2.

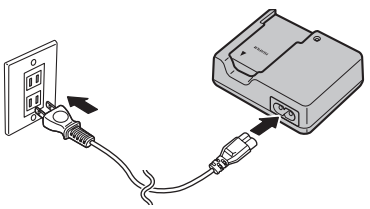

Plug the battery charger into a power outlet. The charging indicator blinks orange and charging begins. When charging is completed, the indicator lights orange. Charging completes after 130 minutes.

B. Loading the Battery

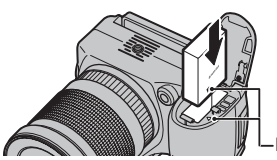

Make sure that the indicators are aligned to load the battery. Check that the battery is firmly held in place.

C. Setting up the Camera

1.



Set the Power switch to ON to turn the camera on in Shooting mode.

2.

① 言語/LANG. screen appears on the LCD monitor.

② Press ▲, ▼, ◀, or ▶ to select the language.

③ Press MENU/OK to confirm the setting.

3.

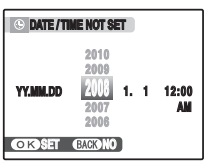

① You can select your preferred date format.

② Press ◀ or ▶ to select Year, Month, Day, Hour, or Minute. Press ▲ or ▼ to correct the setting.

✻ Refer to the Owner's Manual for "Turning On and Off".

D. Taking Pictures

1.

Set the Power switch to ON and set the Mode dial to AUTO.

2.



Halfway pressed

Press the shutter button halfway for focusing a camera.

3.

Fully pressed

Press the shutter button down fully to take a picture. The camera makes a "Click" sound and takes the picture.

E. Viewing the Images

1.



Set the Power switch to ON to turn the camera on.

2.

Press ▶.

3.

Press ◀ or ▶ to move through your images.

How to insert a Memory Card

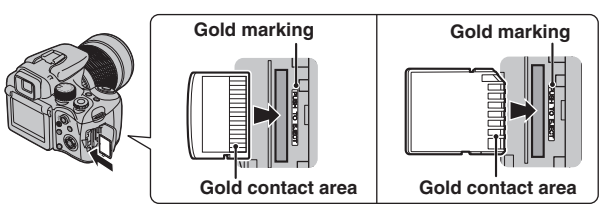

Align the gold marking with the gold contact area, then insert an **xD-Picture Card** or SD Memory Card completely.

Using Intelligent Face Detection

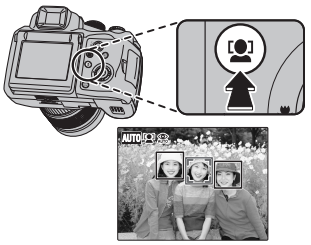

With Intelligent Face Detection, the subject's face(s) is detected and focused on automatically, so you can take a picture of people in most suitably lit conditions.

Intelligent Face Detection will even detect and focus on two faces on opposite sides of the frame, where ordinarily the background in the center of the frame would be focused. In addition, Intelligent Face Detection adjusts for the brightness of the faces.

Push ◙ to zoom in on a face when playing back the image taken with Intelligent Face Detection.

Viewing Images on your PC

A.Installing Software

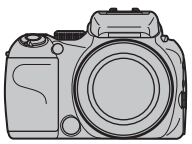

B.Connecting the Camera to your PC

C.Saving the Images

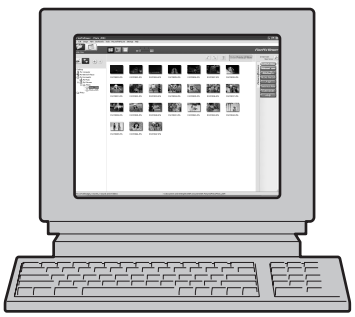

A. Installing Software

Do not connect the camera to your PC until the software installation is completed.

1. Turn on your PC and start up Windows.

Users of Windows 2000 Professional or Windows XP or Windows Vista should log in by using a system administrator account (e.g. "Administrator").

2. Quit all other active applications until no applications are shown in the taskbar.
3. Load the enclosed CD-ROM into the CD-ROM drive. The installer starts up automatically.
   For Windows Vista users:
   When loading the bundled CD-ROM on your PC, the "AutoPlay" window may appear. In this case, click "SETUP.exe". When "User Account Control" window appears, click "Allow".
4. The Setup screen appears. Click the [Installing FinePixViewer] button.
5. After installation completed, press [Restart] button.

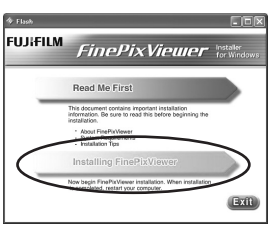

B. Connecting the Camera to your PC

1. Insert the Memory Card with images into the camera.
2. Connect the camera to your PC using the USB cable.

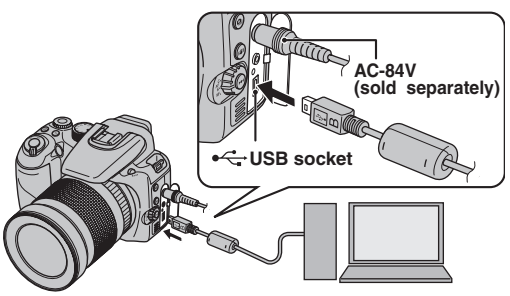

3. Set the Power switch to ON to turn the camera on.

4. Windows 98 SE/Me/2000 Professional

   FinePixViewer starts up automatically.

   Windows XP/Vista

   The "Found New Hardware" help message appears in the bottom-right corner of your screen. This message will close when the settings are completed. No action is required.

   FinePixViewer starts up automatically.

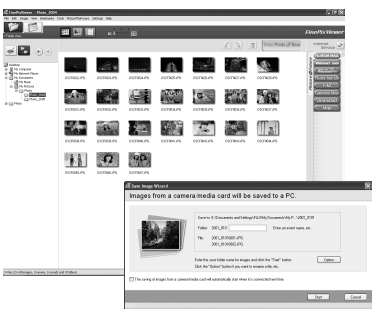

C. Saving the Images

1. The Save Image Wizard starts up. Click the [Start] button.
2. Check that the files are downloaded from the camera to your PC and that a folder with the date is created.
   Ex. \My Documents \ My Pictures \ 2008_1201

D. Viewing the Images

1. Click the [Show List of Images] button.

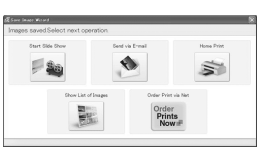

2. Select "Preview" in the View menu to display an enlarged image.

For more information

Refer to "How to use FinePixViewer" in the HELP menu, or "Software Installation" in the Owner's Manual, or visit Fujifilm "Q&A Search" in the following website.
(**http://www.fujifilm.com/products/digital_cameras/index.html**)
For Macintosh users, refer to "Software Installation" in the Owner's Manual.